



Write Walls Care and Maintenance

Before Writing on Dry Erase Surface

Before initial use of the writing surface, the material must be cleaned with Expo Cleaner and a soft cloth, and then towel dried. Follow with clean water and a soft cloth. Use another clean towel to dry.

Markers

We recommend the use of Expo Bold Color markers.

Daily Cleaning

Micro-fiber Cloths are recommended as erasers to remove the dry erase markings. Change or clean the cloth often, as they become soiled to avoid leaving excessive marker residue on the surface. Micro-fiber Cloths can be washed. For cleaning marker residue build-up, use Expo brand dry erase cleaning solution and a soft towel. Projection Capable items have a matte/low-glare dry erase surface that requires more frequent cleaning than Writing Only/Gloss material. No markings will be permanent, but it may be necessary to use Expo Cleaner to bring these Projection Capable products back to “like new” condition.

Long Term Care

Clean the entire surface on a regular basis to insure the ultimate performance and appearance of the product over the long term. Do not use abrasive cleaners/cleaning tools, erasers with hard plastic edges/housing or pointed writing instruments on the dry erase surface.

CARE AND MAINTENANCE

WWW.WRITEWALLSDRYERASE.COM p. 800.222.1028 f. 800.925.5329 SALES@WRITEWALLSDRYERASE.COM